




Quad-Fold Deluxe Golf Push Cart

Model: CaddyLite 13.5

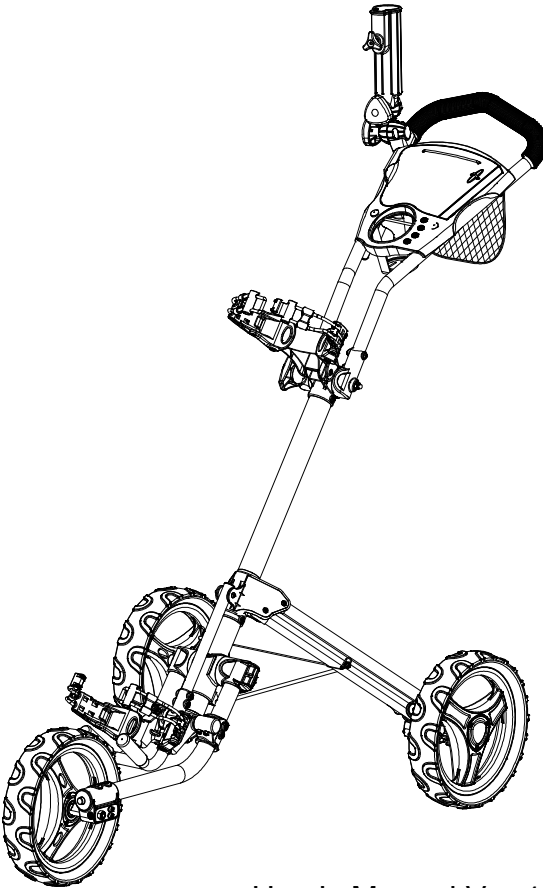


User's Manual Ver.1

WARNING:


FOR YOUR OWN SAFETY, PLEASE REVIEW THESE WARNINGS AND KEEP THIS USER GUIDE FOR FUTURE REFERENCE.

- Before using this golf cart, please read and understand the important instructions and warnings in this user guide.
- AVOID INJURY by always following the folding and unfolding the cart instructions carefully.
- AVOID INJURY by keeping clear of moving parts while adjusting, folding or unfolding this cart.
- ALWAYS make sure the cart is fully extended and locked before use.
- ALWAYS make sure the cart is folded and locked properly before lifting or transporting.
- ALWAYS use the brake when parking the cart.
- DO NOT run while using this cart.
- DO NOT use accessories other than those designed specifically for this cart.
- Keep hands and fingers away from moving parts or sliding sections of the cart!


Unfolding the cart

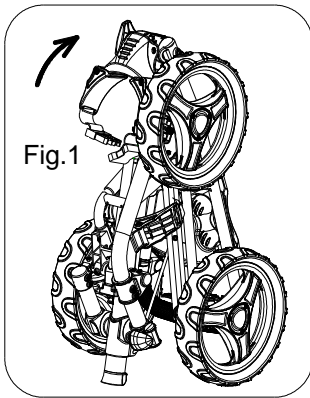

Step1: Adjust the upper bracket to proper position as in fig.1

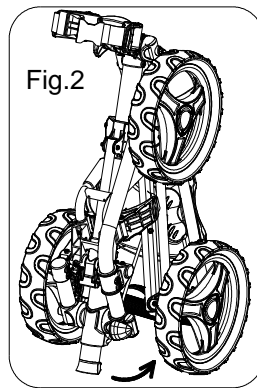


Step2: Unlock the lower red buckle to release front wheel fork as in fig. 2

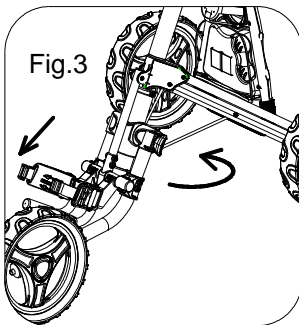


Step 3: Push the front wheel fork downward until the support bracket clicks and then lock the red buckle as in fig. 3


Folding the cart

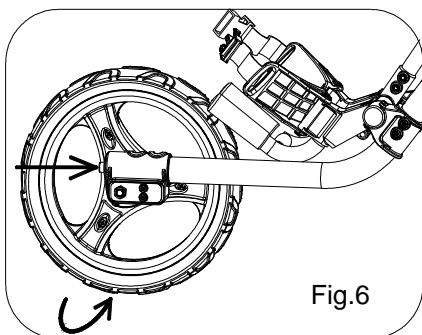


Step 1: Press the red button and rotate the front wheel counterclockwise 180 degrees to outside of the cart as in fig. 6

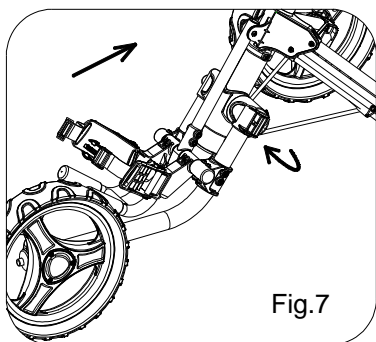



Step 2: Release the lower red buckle, fold the front wheel folk till it click to position. Lock the buckle as in fig. 7 & 8

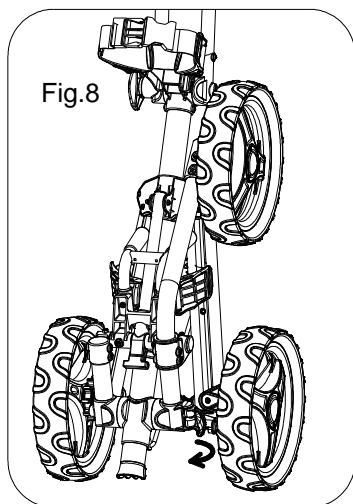

Umbrella Holder


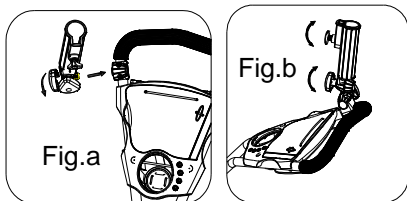


To put in use:
Simply attach the umbrella holder onto the cart as in fig. a&b

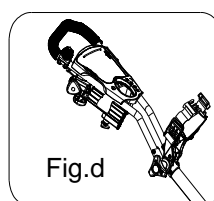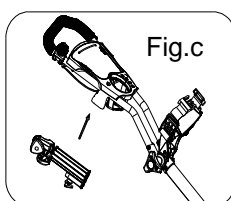

To store:
Attach the umbrella holder to the storage rack on the handle as in fig. c & d



Install and Remove the main wheels & use the brake

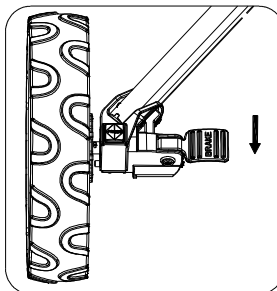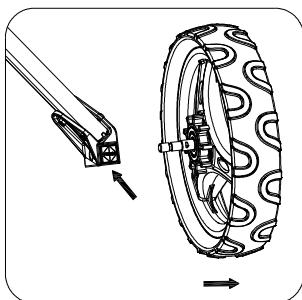

Press the red button on the wheel holder to remove or install the rear wheel.

Step on the brake pad to activate and step on again to deactivate the brake

Bag Holder Strap Adjustment

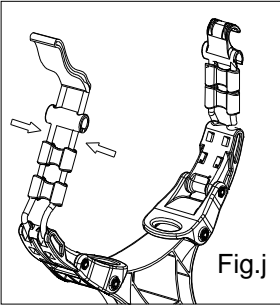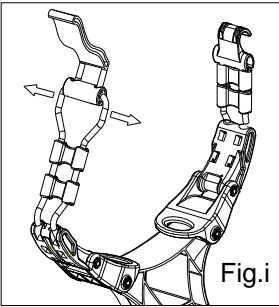

Refer to the Fig.i & Fig.j:

- 1.Pull the elastic strap out of the strap buckle as in Fig.i.
- 2.Adjust the strap to desired length.
- 3.Push the elastic strap back to the strap buckle as in Fig.j.

WARRANTY

CaddyTek Inc. warrants its products to be free of defects and workmanship for one year from the date of purchase. We will either repair or replace defective products at our option.

Normal wear and fading of products is not considered a manufacturer's defect. This warranty does not apply to claim of damage to items used in connection with CaddyTek Inc. products. In the case of deterioration due to normal use we will repair the item for a normal charge. CaddyTek Inc. is the sole judge of any claim or warranty.

PRODUCT REGISTRATION

I have read and understand this product's operation and warranty, and wish to record my purchase:

Model: _____
Name (Mr./Mrs./Miss): _____
Address: _____
City: _____ State: _____ ZIP: _____
Tel: _____ E-Mail: _____
Date of Purchase: _____ Name of Store/Dealer: _____
Round of Golf per Month: _____ H' CAP: _____
Signed: _____ Date: _____

Failure to return this card may result in delayed response to you
warranty claim



Caddytek Inc.
20153 Paseo Del Prado
Walnut, CA 91789, USA


Package contents:


- 1.The main frame of the cart with the front wheel
- 2.Two main wheels
- 3.Umbrella holder
- 4.This user's manual
- 5.Hangtag on the handle
- 6.Tools for adjustment

In case any of above item is missing or damaged, please call
909-895-6478


Part Identification:

- A: Foam grip
- B: Umbrella holder
- C: Umbrella holder base
- D: Scorecard holder assembly
- E: Storage net
- F: Handle frame
- G: Upper bag holder bracket assembly
- H: Adjustable handle mechanism
- I: Main frame
- J: Connection Rod
- K: Leg bracket
- L: 2 holes leg frame
- M: 3 holes leg frame
- N: Lower bag holder bracket assembly
- O: Lower frame lock mechanism
- P: Supporting cable
- Q: Right stabilization bar
- R: Right wheel lock mechanism
- S: Rear wheel assembly
- T: Front wheel fork assembly
- U: Front wheel assembly
- V: Left wheel lock mechanism
- W: Footbrake
- X: Left stabilization bar
- Y: Umbrella holder rack

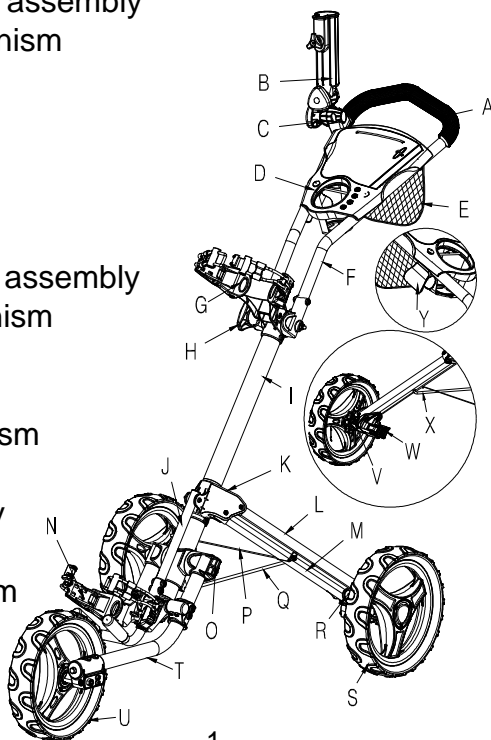


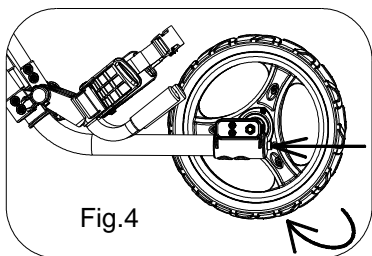


Step 4: Push the red button to rotate the front wheel clockwise 180 degrees to the inner side of the cart as in fig. 4

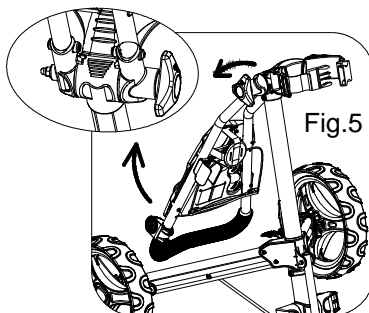

Step 5: Release the handle buckle, adjust handle to desired position, then tighten the button as in fig. 5
The cart now is ready for use.



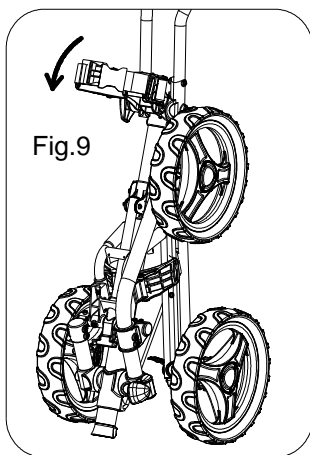


Step 3: Push the upper bag holder bracket downward to the folding position as in fig. 9

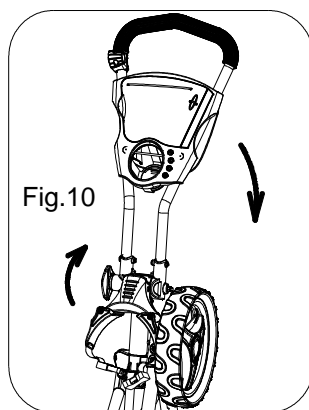

Step 4: Release the upper red button to fold the handle downward then tighten it as in Fig.10

Front Wheel Alignment

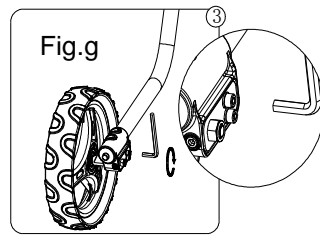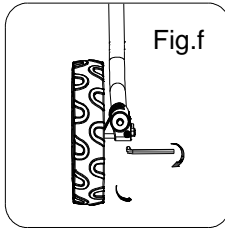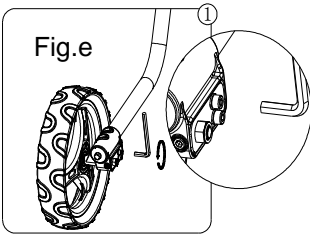

If the cart veers to the right:

Step 1: Face the front wheel of the cart and use the provided Allen wrench to loose the two side screws as in Fig.e.


Step 2: Then use the Allen wrench to adjust the front bolt clockwise until the front wheel is centered as in Fig.f. Then tighten the two side screws as in Fig.g.

If the cart veers to the left:

Step1: The same as above.

Step 2: Adjust the front bolt counterclockwise until the front wheel is centered as in Fig.f. Then tighten the two side screws as in Fig.g.

Adjusting & tightening the handle

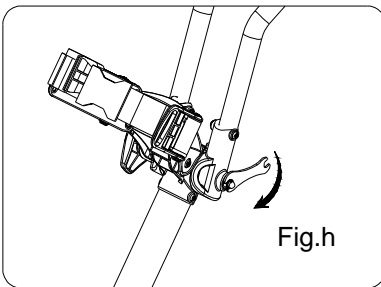

If the handle becomes loose during normal use, please use the supplied tool to tighten the handle as in Fig.h.

Stamp

Caddytek Inc.
20153 Paseo Del Prado
Walnut, CA 91789
USA

You can also register your Golf Cart on www.caddytek.com

